## **MEGAPHONE/BULLHORN**

Professional Rechargeable Megaphone w/ Built-in USB Flash & SD Memory Card Readers

# **QUICK GUIDE**


Model: PMP57LIA





Megaphone for handheld or shoulder·slung use (strap supplied). Detachable anti-how/ microphone on coiled lead with on-off switch and volume control. Metal and ABS construction.

#### Operating instructions

- 1. When carrying the megaphone on the shoulder, press the **(1)** pressto-talk power on-off switch, on the left side of the microphone.
- 2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the **(2)** press-to-talk power on-off switch back with your index finger.
- 3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
- 4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to max without causing howling.

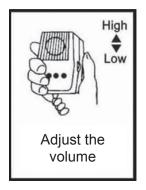


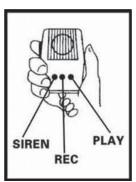

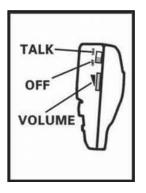


#### Notes

- **1.** Make sure the batteries are inserted correctly, observing correct polarity.
- **2.** Remove the batteries when the megaphone is not in use for a long period of time.
- **3.** Drained batteries do not give sufficient volume. Replace the batteries at regular intervals.

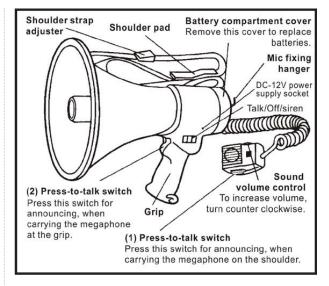


#### TO REPLACE BATTERIES

 
1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.



  Insert 8 x type-C (UM-2) batteries in the battery case observing correct polarity.



  Insert the battery case with batteries into the battery compartment of the megaphone, paying attention to polarity.



### **SPECIFICATIONS & FEATURES:**

- Projection Range: 1200 Yards
- Modes: Talk And Siren
- For Indoor/Outdoor Use
- Variable Volume Control
- · Ergonomic Grip w/ Lightweight Chassis
- Power: 50 Watts

- Built-in SD & USB Flash Memory Card Readers
- Powered by: 8 X C Batteries, Not Included
- Dimensions: Diameter 9.44" X Length 13.77"
- Weight: 3.5 lbs.
- Lithium Rechargeable Battery Lasts up to 16 hours
- Plug in MP3 Players or External Devices to the 3.5mm Aux-In Jack